


LeChateau Room 109 Turning the system on

Push this button once to start the occupied timer.

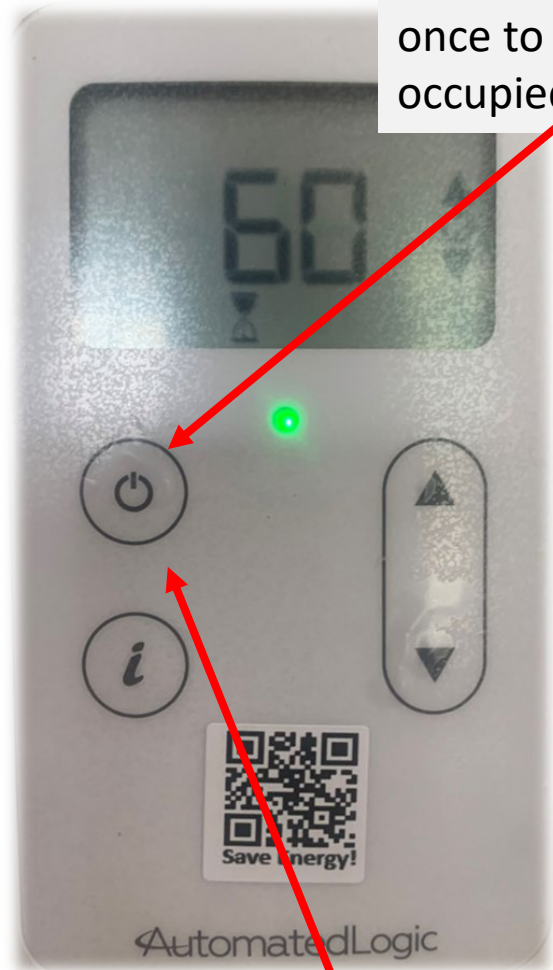


59 minutes left on timer.

If you want to stop occupied timer, push a second time and "0" will show, which puts the time to zero minutes and the system will revert to unoccupied mode.

If there is a desire to keep the system running for longer than 60 minutes, after the initial push, then use the up/down arrows. Time will increment/decrement by 60 minutes.

180-minutes will be the most at one time. Stop pushing buttons when you have the time that you wish, and the system will revert to the room temperature and begin the timed countdown.

Once on; adjust the thermostat setting

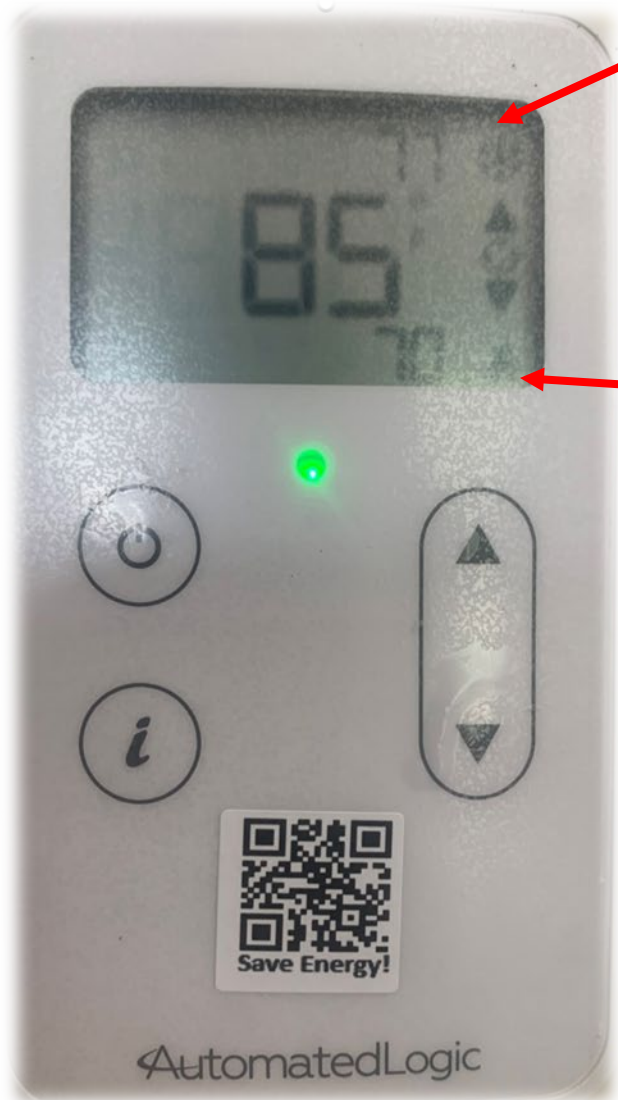

Cooling Set Point

Heating Set Point

Press Up/Down Arrows for set point adjustment. Your range for cooling is 75-79. Your range for heating is 68-72.